

Operating a Touch Panel Controlled Smart Classroom with Two Projectors

For Immediate Classroom Help call 650-5000

1. Touch the Panel to Wake it Up

Many of the classrooms on campus have audio and video equipment that can be controlled from a simple touch panel on top of the podiums. When you first enter the room, the touch panel may be completely black, like the image on the right (Figure 1). Simply touch anywhere on the screen and it will immediately wake up for you to use.

Fig. 1



2. Press “ON”/Choose “Screen Selection”

When the panel wakes up, it will look very similar to the image shown on the right (Figure 2). You will want to begin by pressing the “ON” button under the “Projector 1” or “Projector 2” column for each projector you would like to turn on. This turns on the projectors individually. After the projector(s) have completely turned on, choose the device you would like to share with the class by pressing the **Screen Selection** button (Figure 2). This will allow you to choose what content is shared on each projector. If you would like to share what you have on the podium computer screen, choose “PC”. To select audio and control the device, press the return button (Figure 3) and then click “PC” again (Figure 2). This will display the computer screen you see, on the projector as well as play any audio you bring up on the computer over the classroom speakers.

Fig. 2


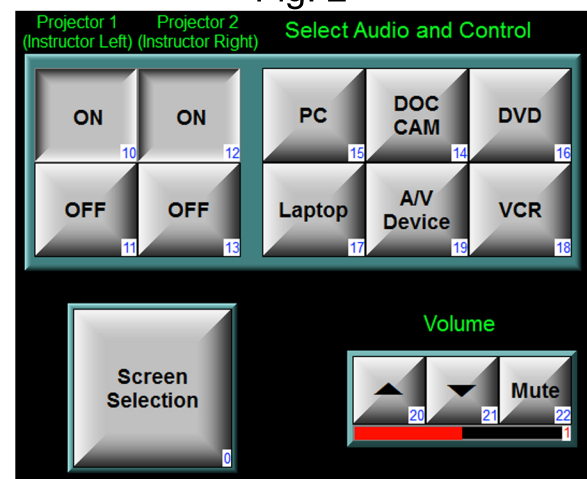


Fig. 3

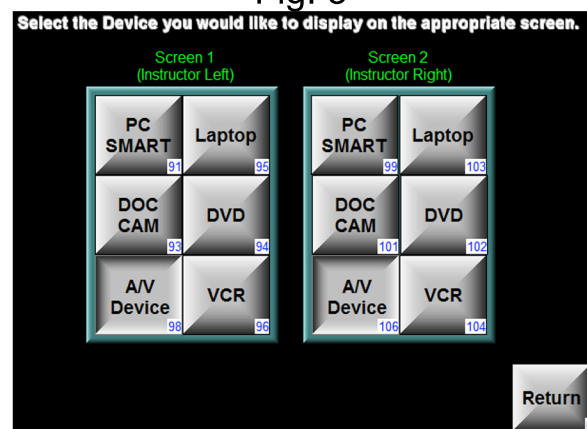

Volume Control

The volume can be adjusted on any device, at anytime, by pressing the up and down buttons on the right side of the screen under the “Volume” column.

Connecting a Laptop

To connect a laptop or tablet to share video, simply connect the VGA or HDMI cable at the top of the podium to your device. To share audio, connect the audio cable to your device. Once your device is connected, select “Laptop” from the “Screen Selection” screen and then again from the “Select Audio and Control” menu.

For Immediate Classroom Help call 650-5000